


# **GLIDE**

**BEARINGS AND SEAL SYSTEMS**

## **GLIDE Install Tools**

For anyone attempting to install one of our Glide Marine Seal Systems, they will want to make sure they are using one our install tools. All retail sales have an install tool already in place in the housing (Seen below). The point of the install tool is to prevent the seal from tearing when sliding the system onto the shaft of the boat. Our tool must be used to be covered under warranty.

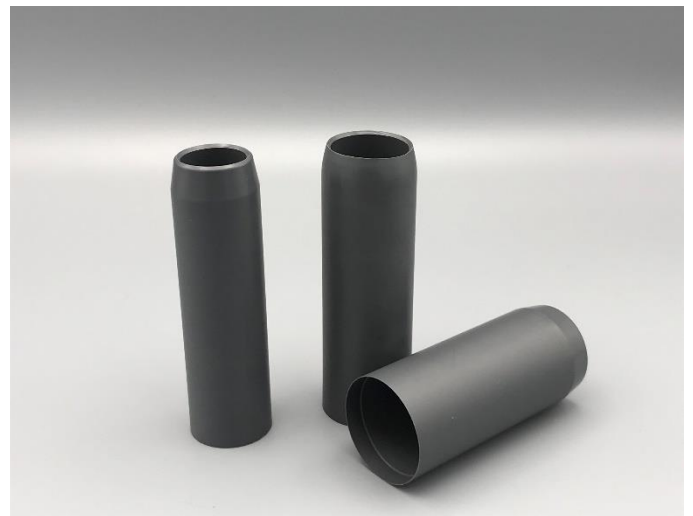

For dealers who sell boats of any of the builders who use Glide Seal Systems, we are happy to send a set of install tools to have on hand at no charge. It is important to note how to insert the tool into the shaft seal.

1. Take the install tool and insert it into the shaft seal from the bottom. DO NOT TRY TO INSERT FROM THE TOP. You have a chance of damaging the seal.
2. You will want to make sure the install tool is far enough into the system that it is poking out about an inch out of the system.
  - Another option for installation: Put the install tool on the end of the shaft and then slide the system over the tool. The tool will slide right up and through the shaft seal.

As always, please don't hesitate to call with any questions or concerns.